

Runway_Glastür_1-flügelig
Runway_glass-door_single-door


Art.-nr. / part no. // Länge / length mm [inch]:

110.00050 + 110.00350 / 1800 [70 7/8"]

110.00051 + 110.00351 / 2100 [82 11/16"]

110.00052 / 2300 [90 9/16"]

110.00071 + 110.00352 / 2540 [100"]


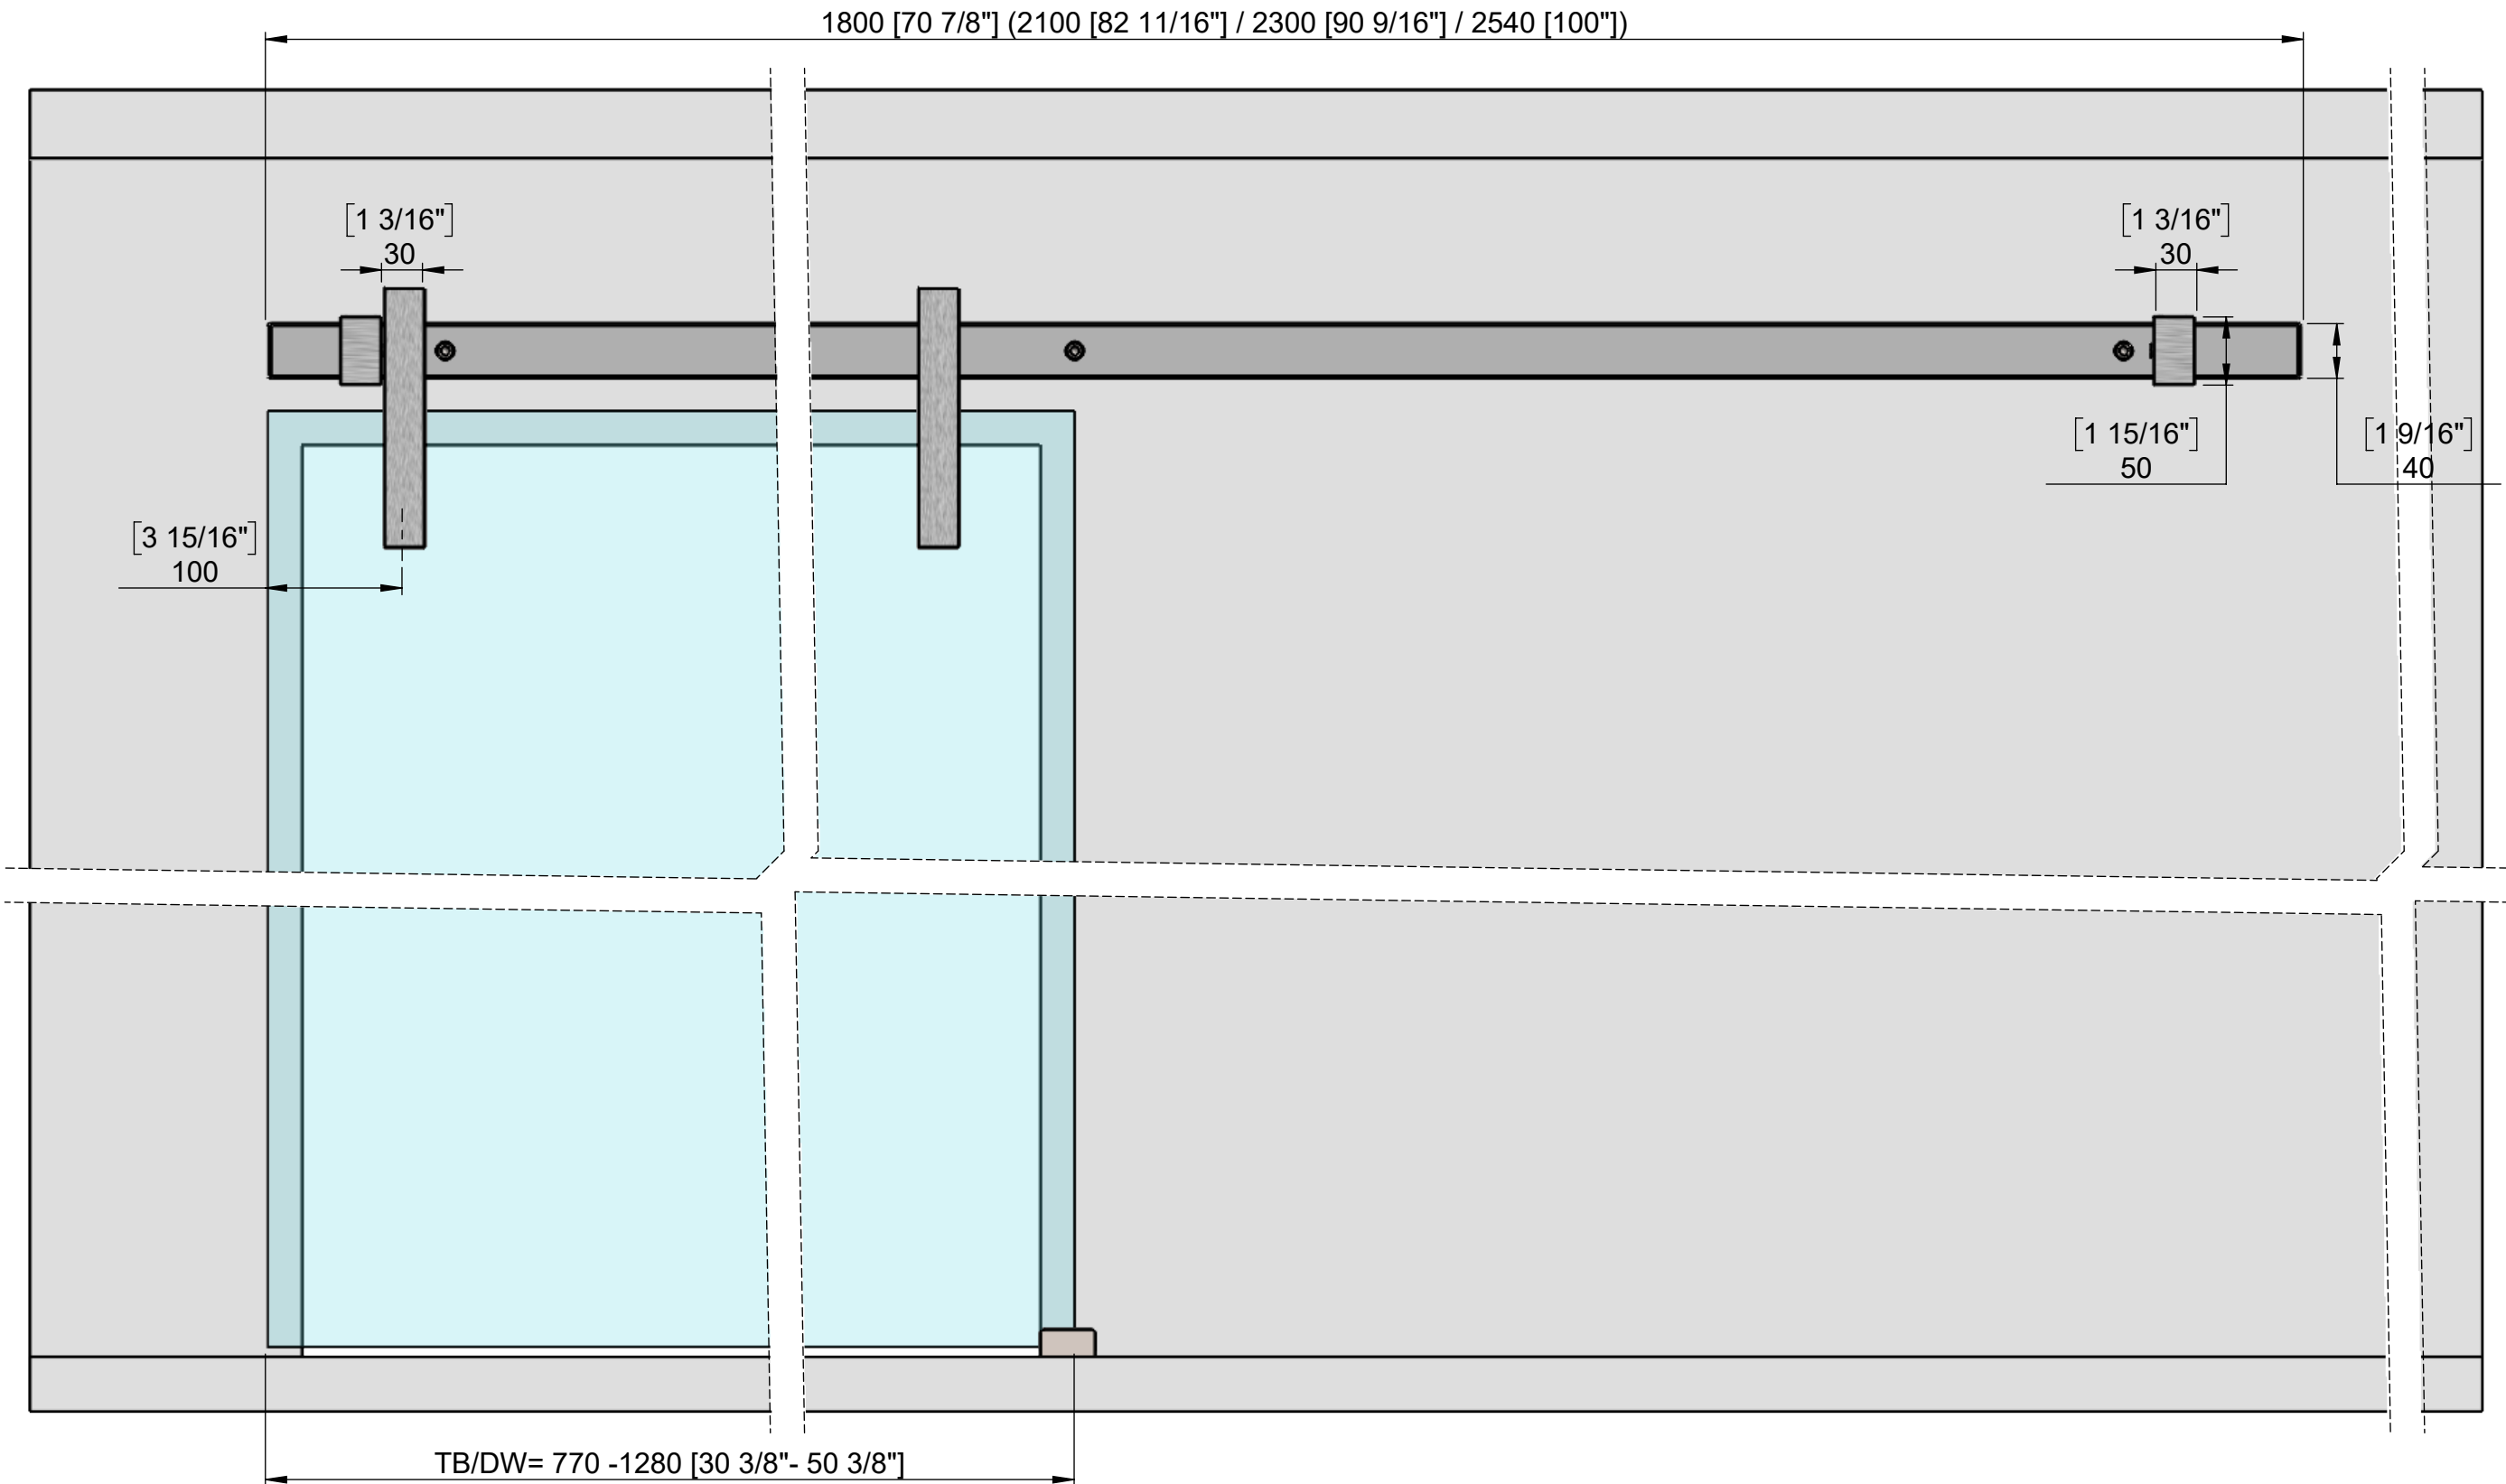


TB=Türbreite / DW = door width

Maßstab / scale 1:5

measure
[inch]
mm


Runway_Glastür_1-flügelig
Runway_glass-door_single-door

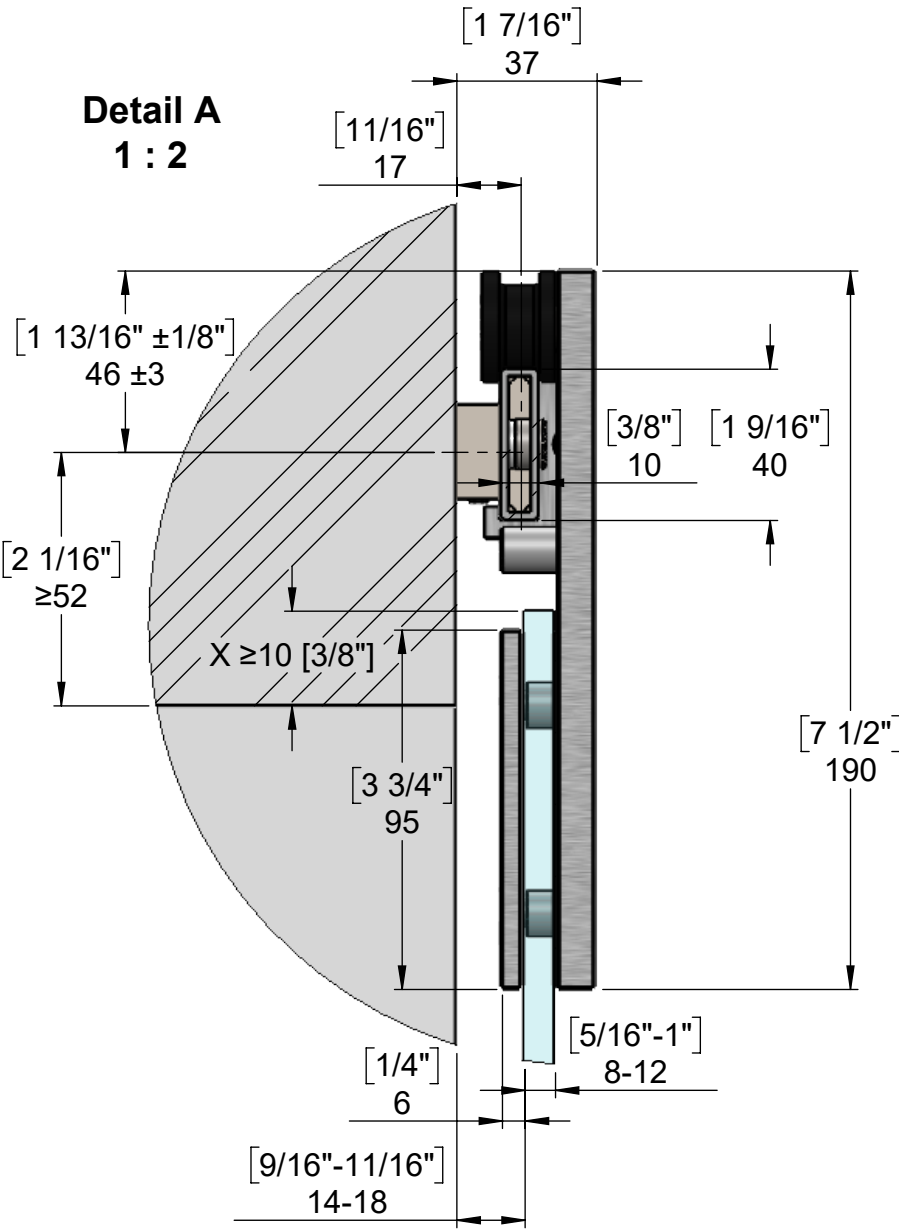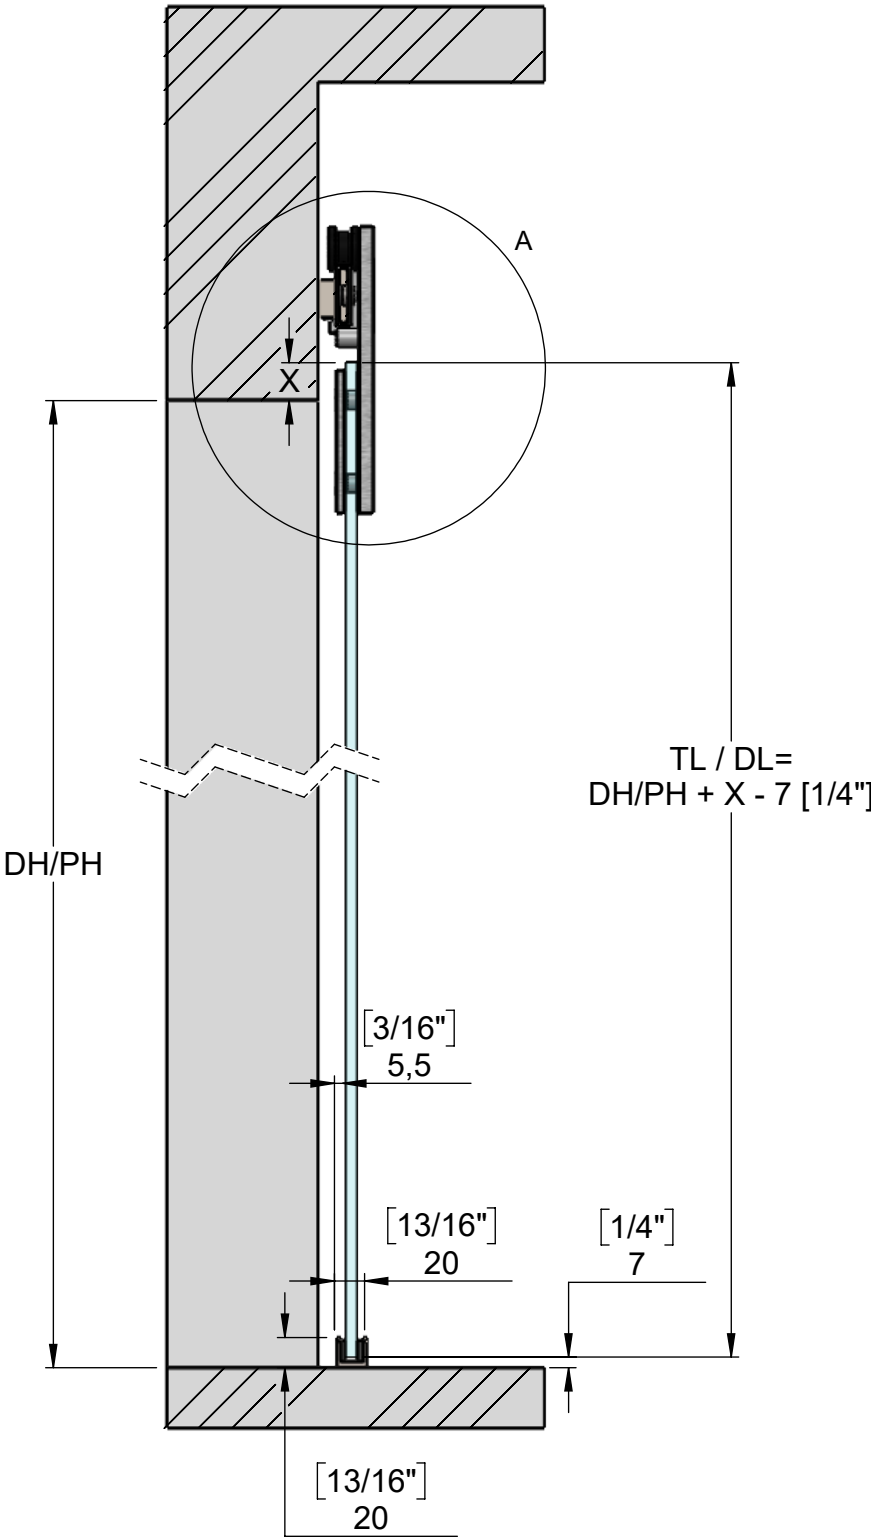


X = Abstand Tür - Durchgang / distance door - passage
DH = Durchgangshöhe / PH = passage height
TL = Türlänge / DL = door length

Maßstab / scale 1:5

measure
[inch]
mm

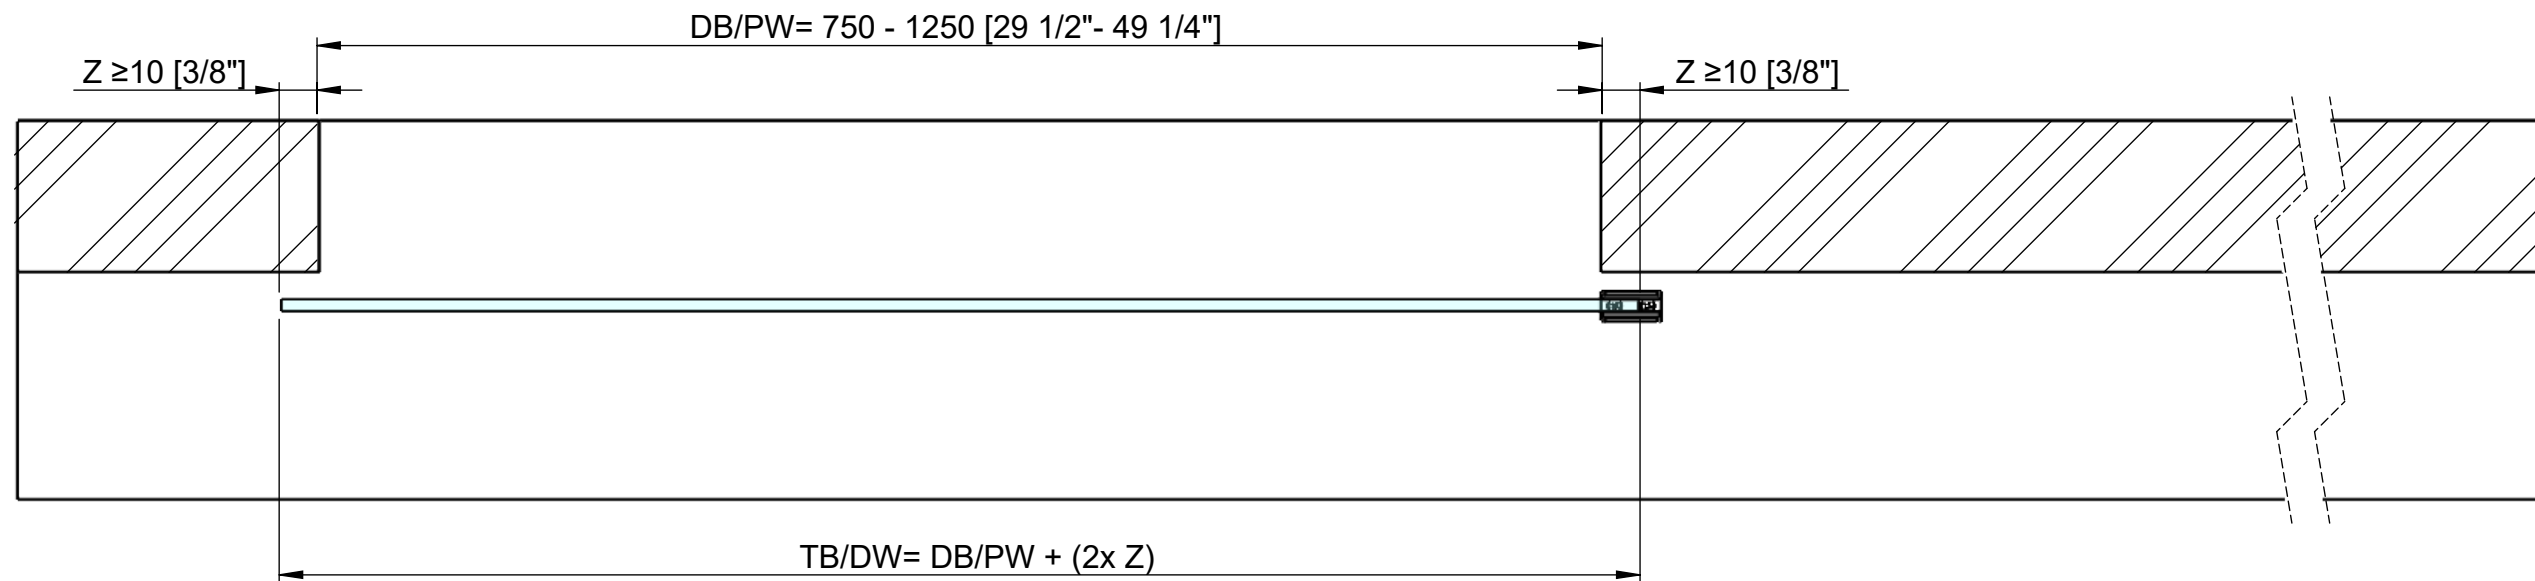

Erforderliche Bohr. am Türblatt zur Befestig. der Laufwagen
Drill holes required on the door leaf for fixing the trolleys

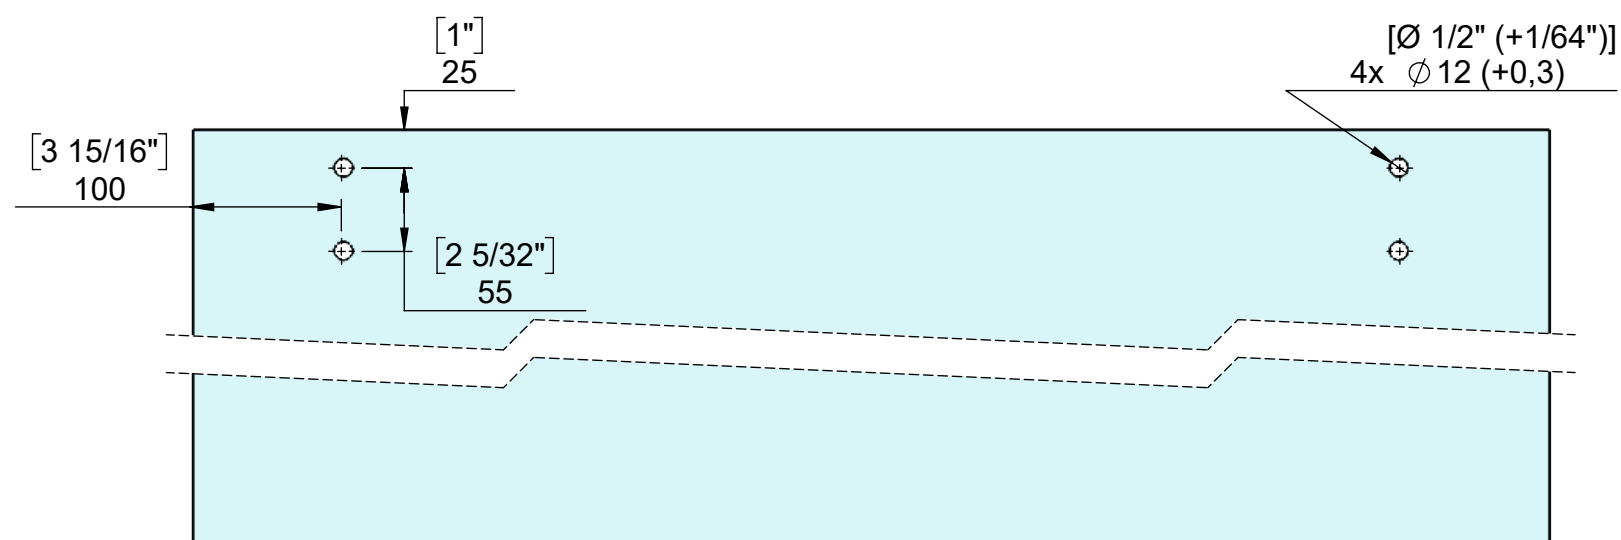

Z = Türüberstand / door overlap
DB = Durchgangsbreite / PW = passage width
TB = Türbreite / DW = door width

Maßstab / scale 1:5

measure
[inch]
mm