




1 Set sliding door fittings Runway

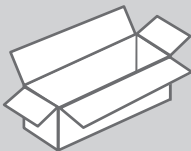


2 Guide rail with cap

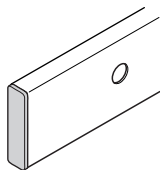


3 Wall fixtures

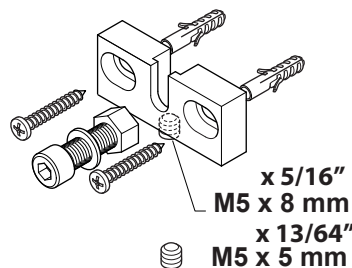


5 Door stopper- set right and left

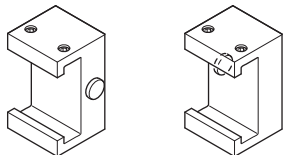

6 Bottom guide (without screws and dowels)



4 Trolley complete

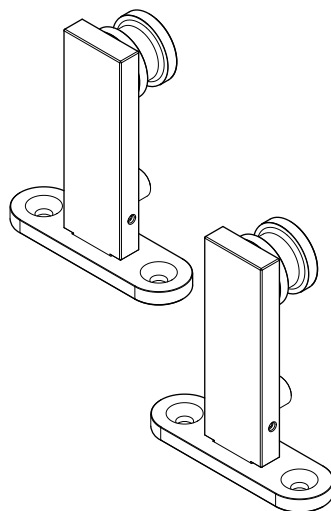

7 Tools



Attention



Screw on



Screw on



Drill



Dowels



Level



Perpendicular



Measure Mark



Visual inspection



Tool



Measure



Clarify questions



At right angle



2 people required



Comply with all general safety regulations when installing the sliding door fittings!

Installation to be completed by qualified licensed contractor.

Be sure to tighten all screw connections one week after starting to use the sliding door fittings!

Never use scouring agents to clean the sliding door fittings; rather use commercially available stainless-steel cleaners!

ABP  beyerle

Beyerle US L.L.C.

5126 S Royal Atlanta Drive, Tucker, GA 30084


Phone (770) 349 - 6324, Fax (770) 934 - 3384, mail: info@beyerle-us.com, www.beyerle-us.com

65_30_00.0054_Runway_Holz_US

Installation instructions

Sliding door fittings Runway

for wood doors (max. 1 3/4")

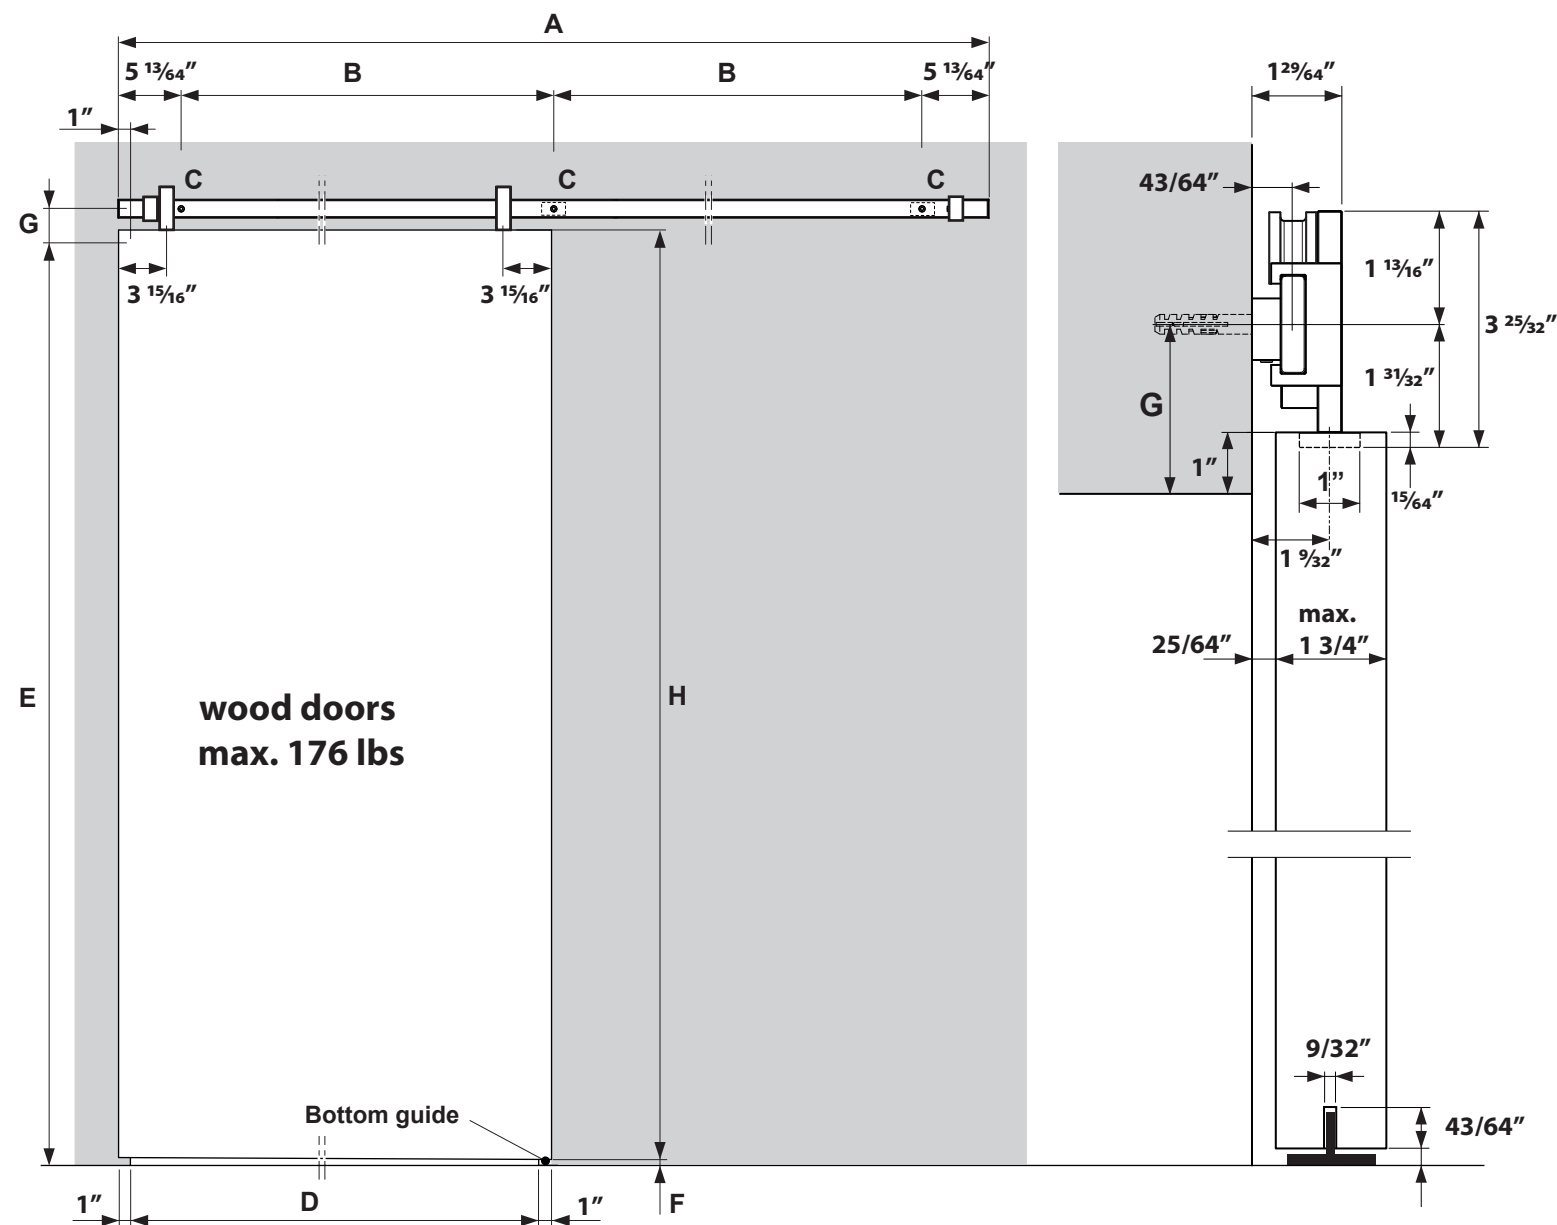

Complete-sets

Set Art.-No.	A inch	B inch	C piece	D inch	E max. inch	F inch	G inch	H max. inch (H = E - F + 1")
110.00109/00411	71 1/32"	30 5/16"	3	29 1/2" - 35 7/16"	98 27/64"	9/32" - 25/64"	2 23/32"	99 9/64"
110.00110/00412	82 53/64"	24 9/64"	4	35 13/16" - 39 3/8"	98 27/64"	9/32" - 25/64"	2 23/32"	99 9/64"
110.00111/00413	90 45/64"	26 49/64"	4	39 3/4" - 44 1/16"	98 27/64"	9/32" - 25/64"	2 23/32"	99 9/64"
110.00112/00414	100 5/32"	29 59/64"	4	44 1/2" - 49 3/16"	98 27/64"	9/32" - 25/64"	2 23/32"	99 9/64"

Right to make technical changes reserved - Dimensions in (mm) or (inch) - Version 01.2015
© by ABP-Beyerle GmbH

ABP  beyerle

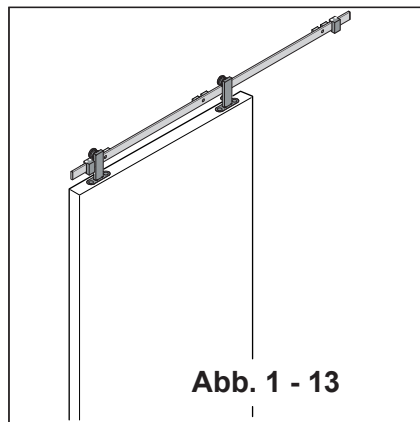


Abb. 1 - 13

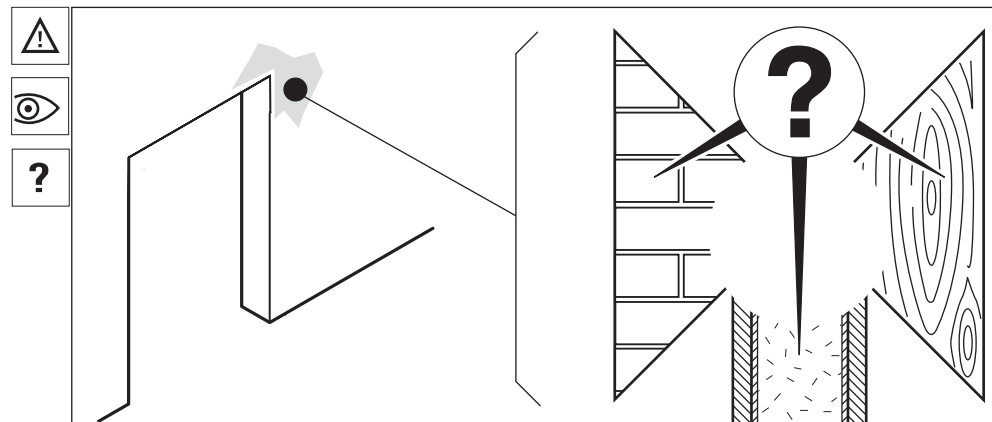


Abb. 1

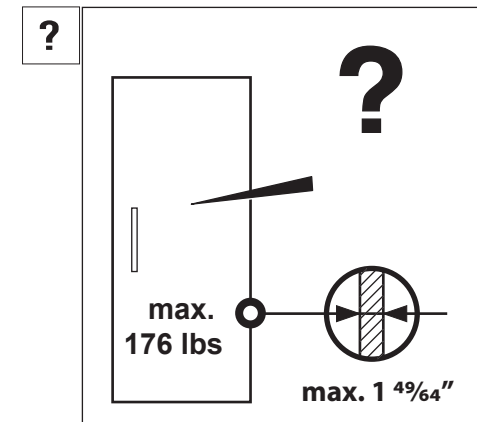


Abb. 2

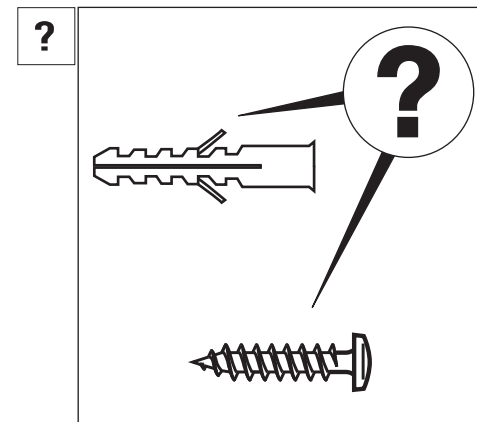


Abb. 3

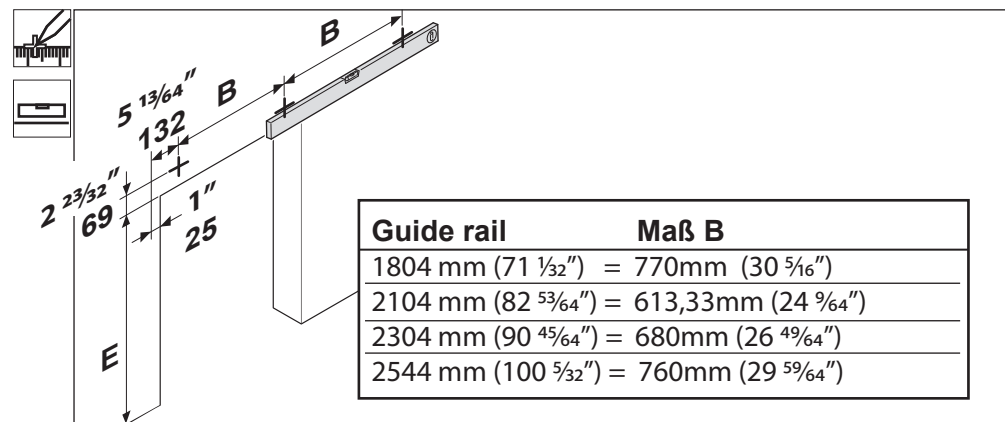


Abb. 4

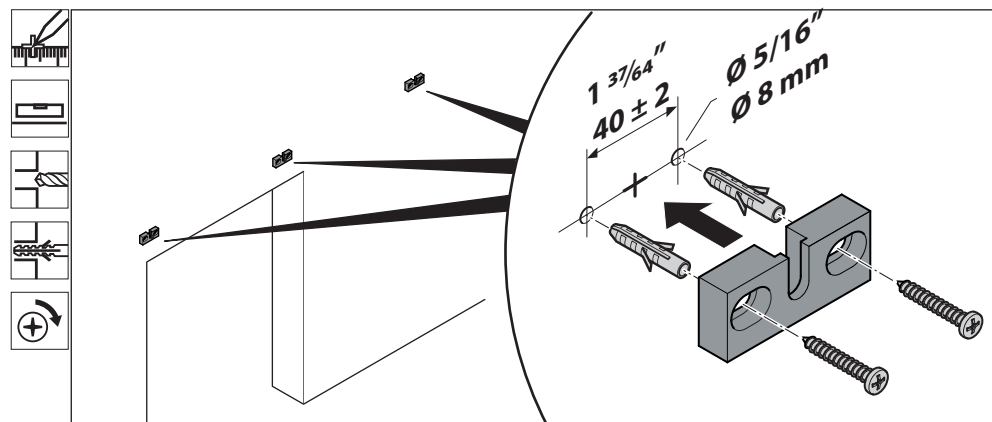


Abb. 5

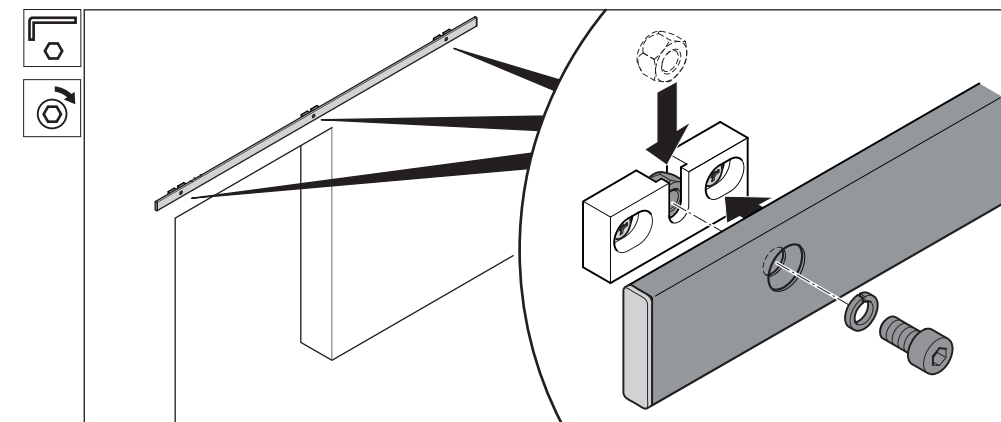


Abb. 6

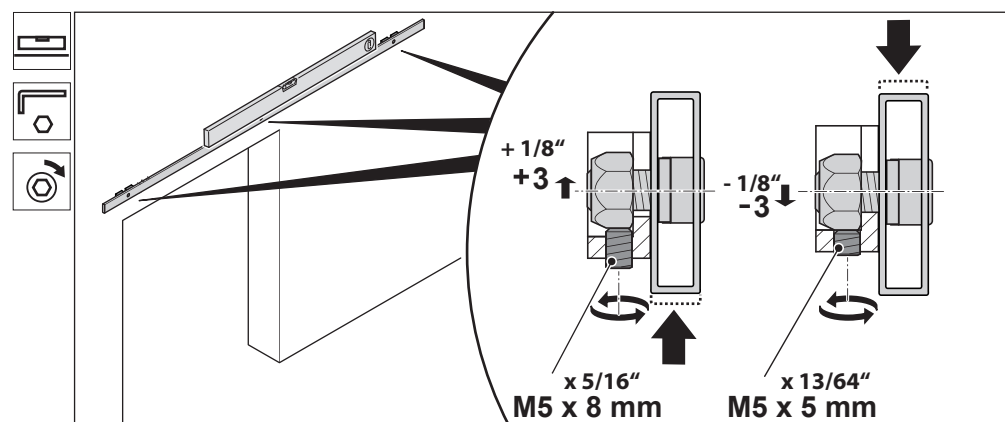


Abb. 7

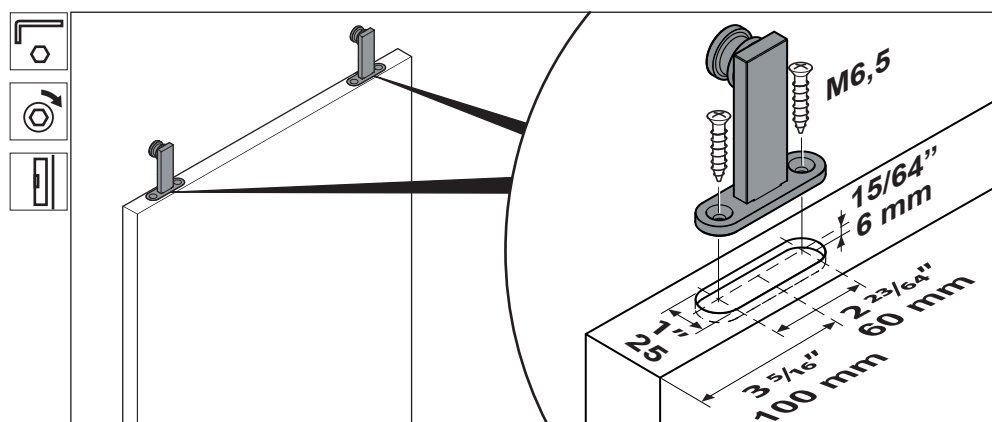


Abb. 8

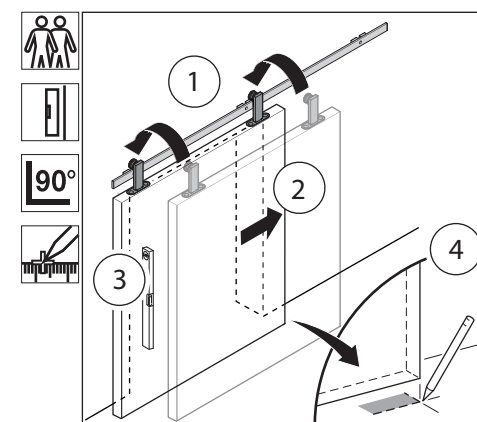


Abb. 9

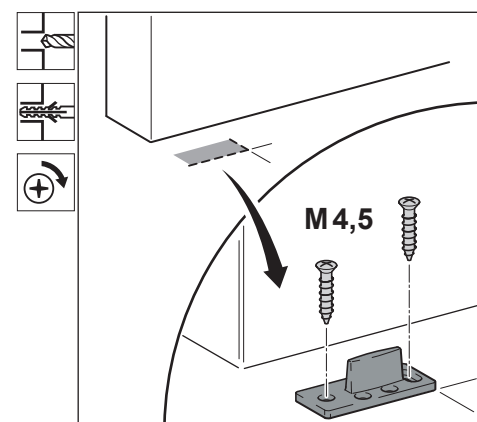


Abb. 10

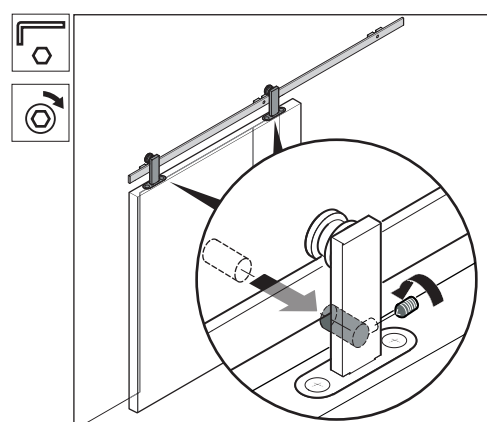


Abb. 11

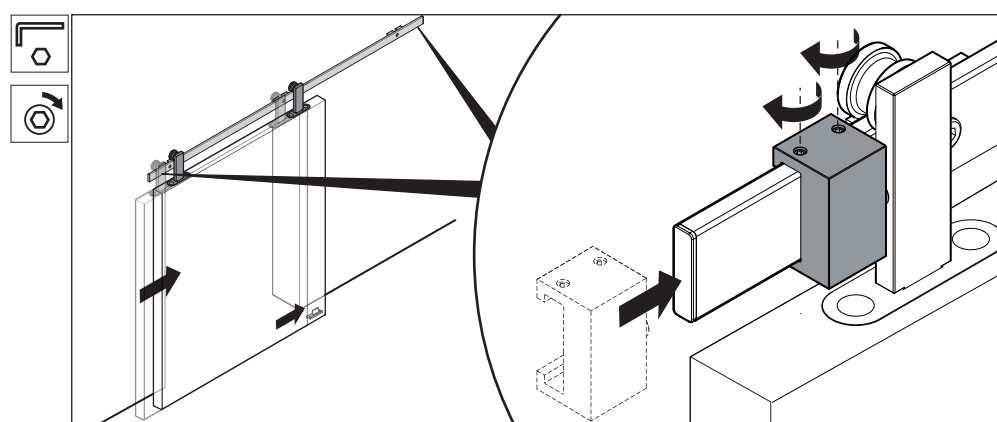


Abb. 12

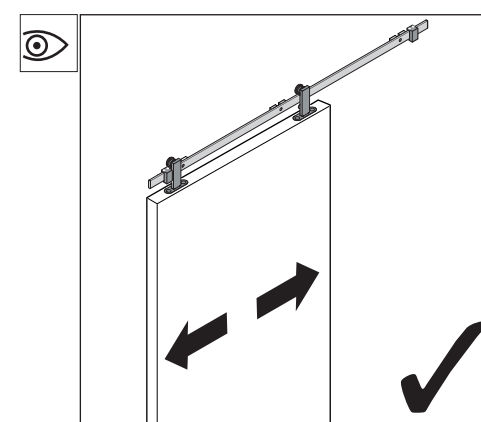


Abb. 13

Installation instructions
Sliding door fittings Runway
 for wood doors (max. 1 49/64")